




## tri-fold Drill Bit Index


The full-size patterns on the following pages will help you shape all of the parts for the drill bit index. When printing the patterns, you need to make sure they print actual size. Sometimes, the print settings are set to "Print to Fit." Depending on your printer, you'll need to turn scaling off and select the option to not scale the print ("None"), "Print Actual Size," or "100%."


After printing the patterns, use spray adhesive to attach them to flexible plastic such as High-Impact Polystyrene (HIPS). Use scissors and a knife to cut the patterns from the plastic to use on the project parts. Then fasten the plastic patterns on the blanks with double-sided tape.

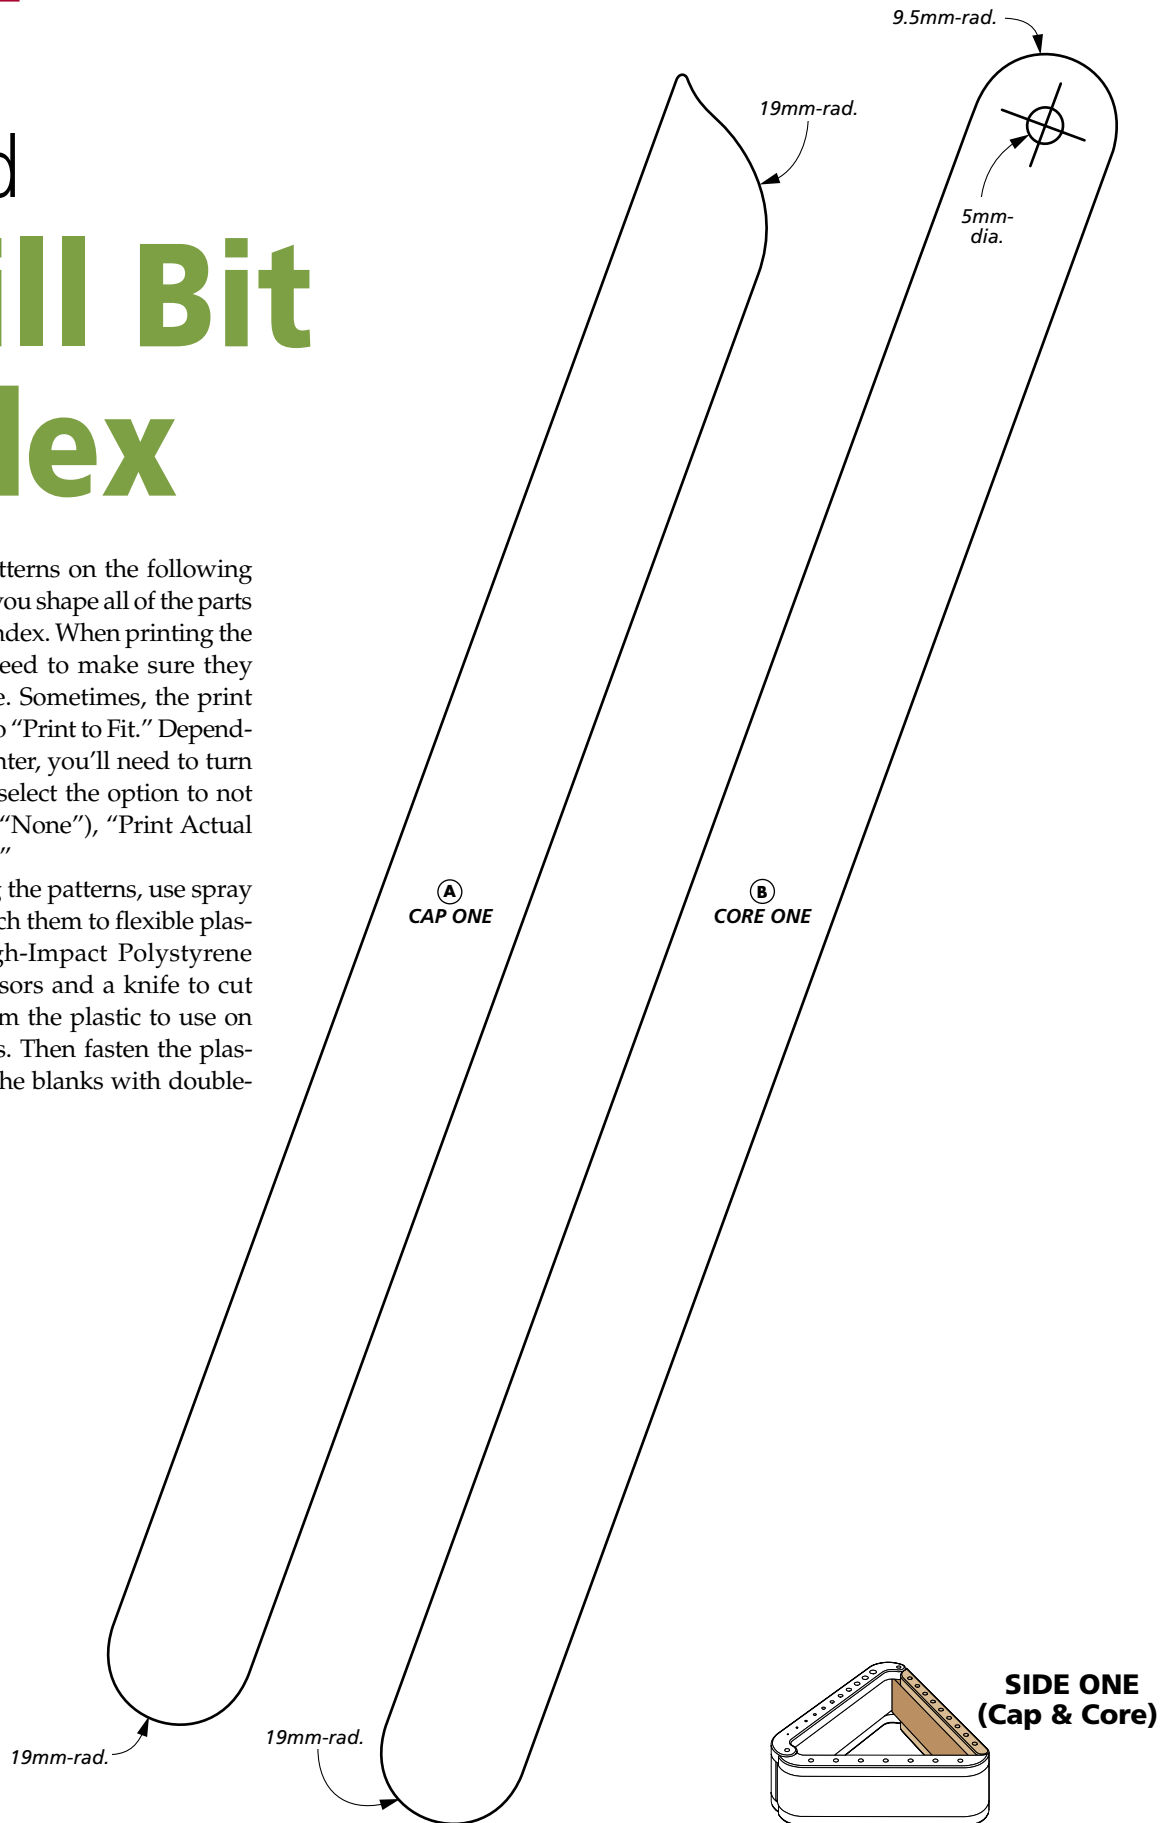

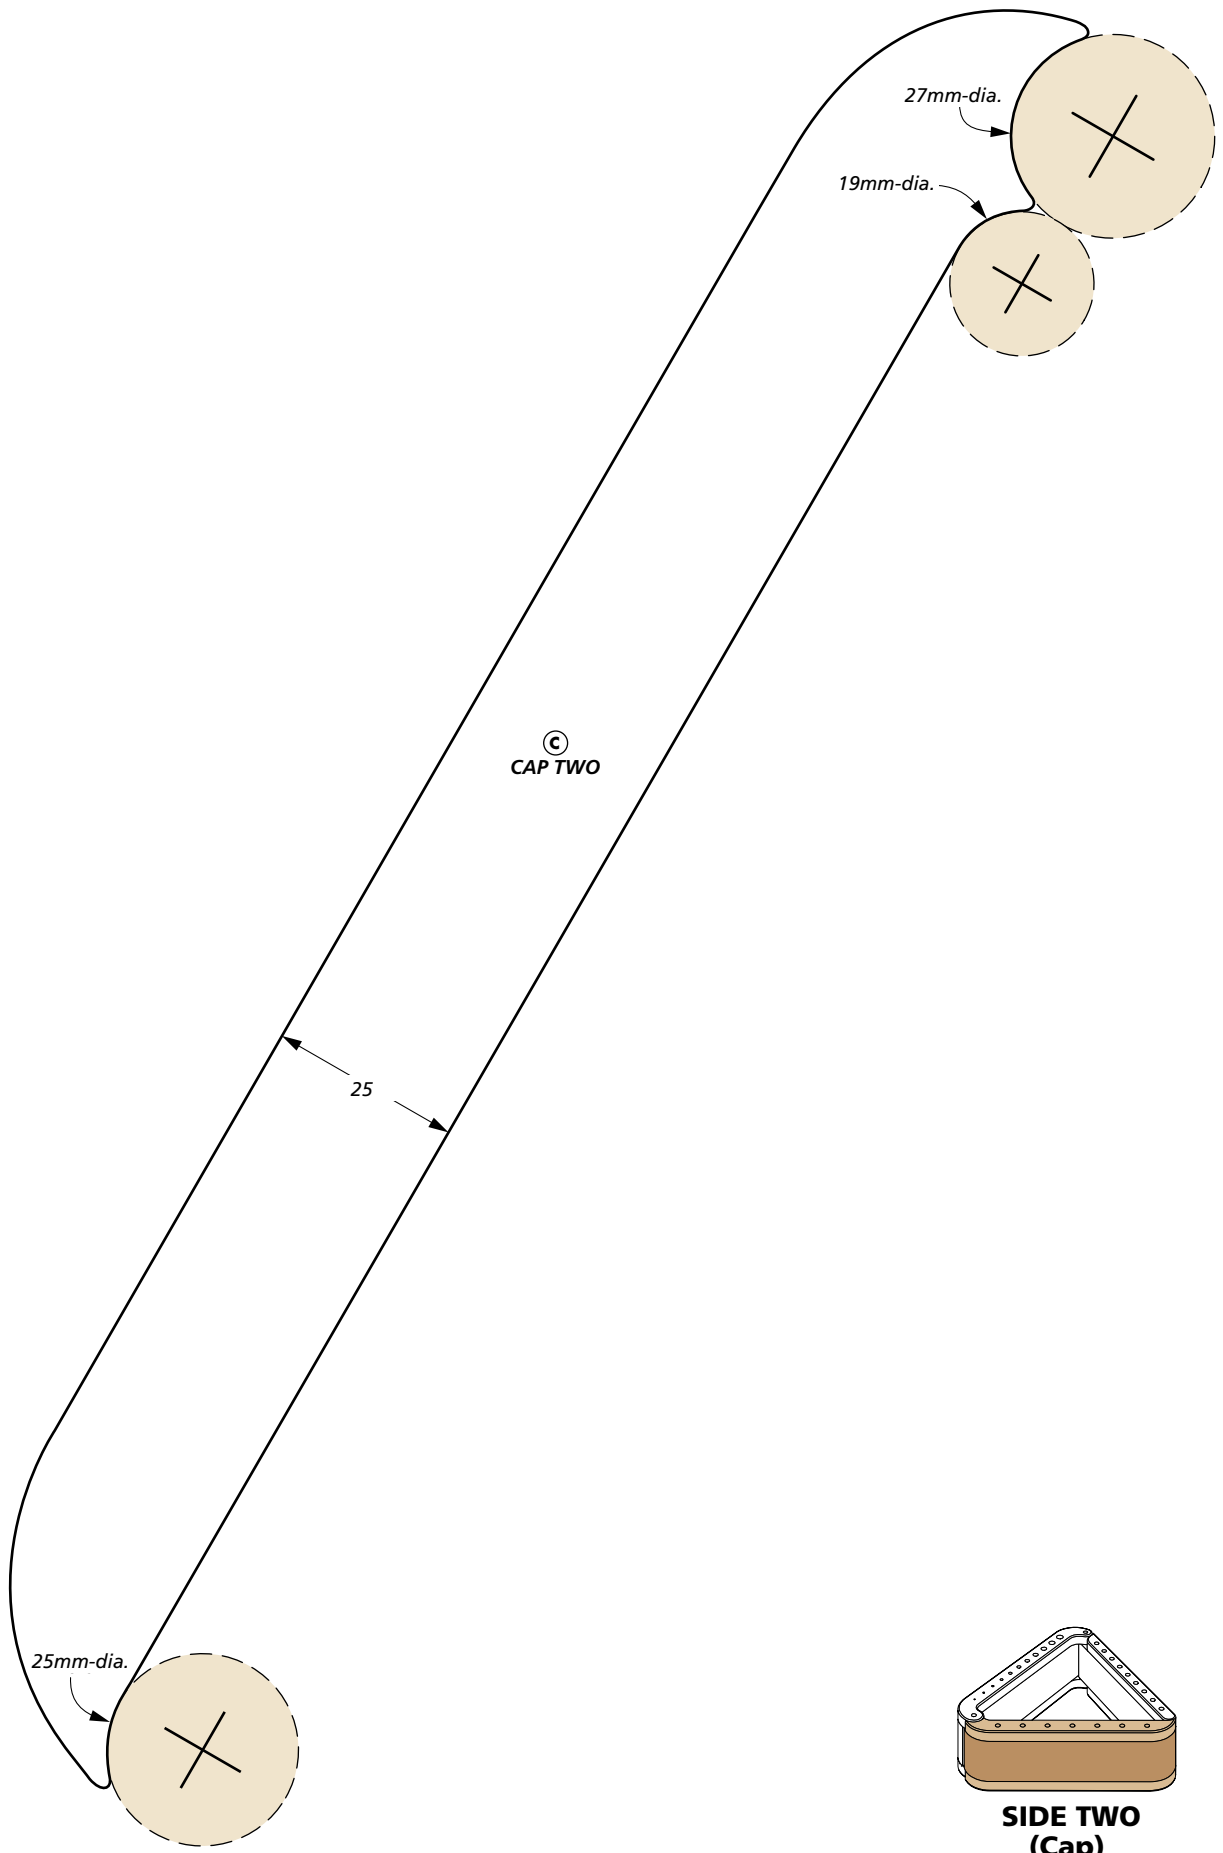

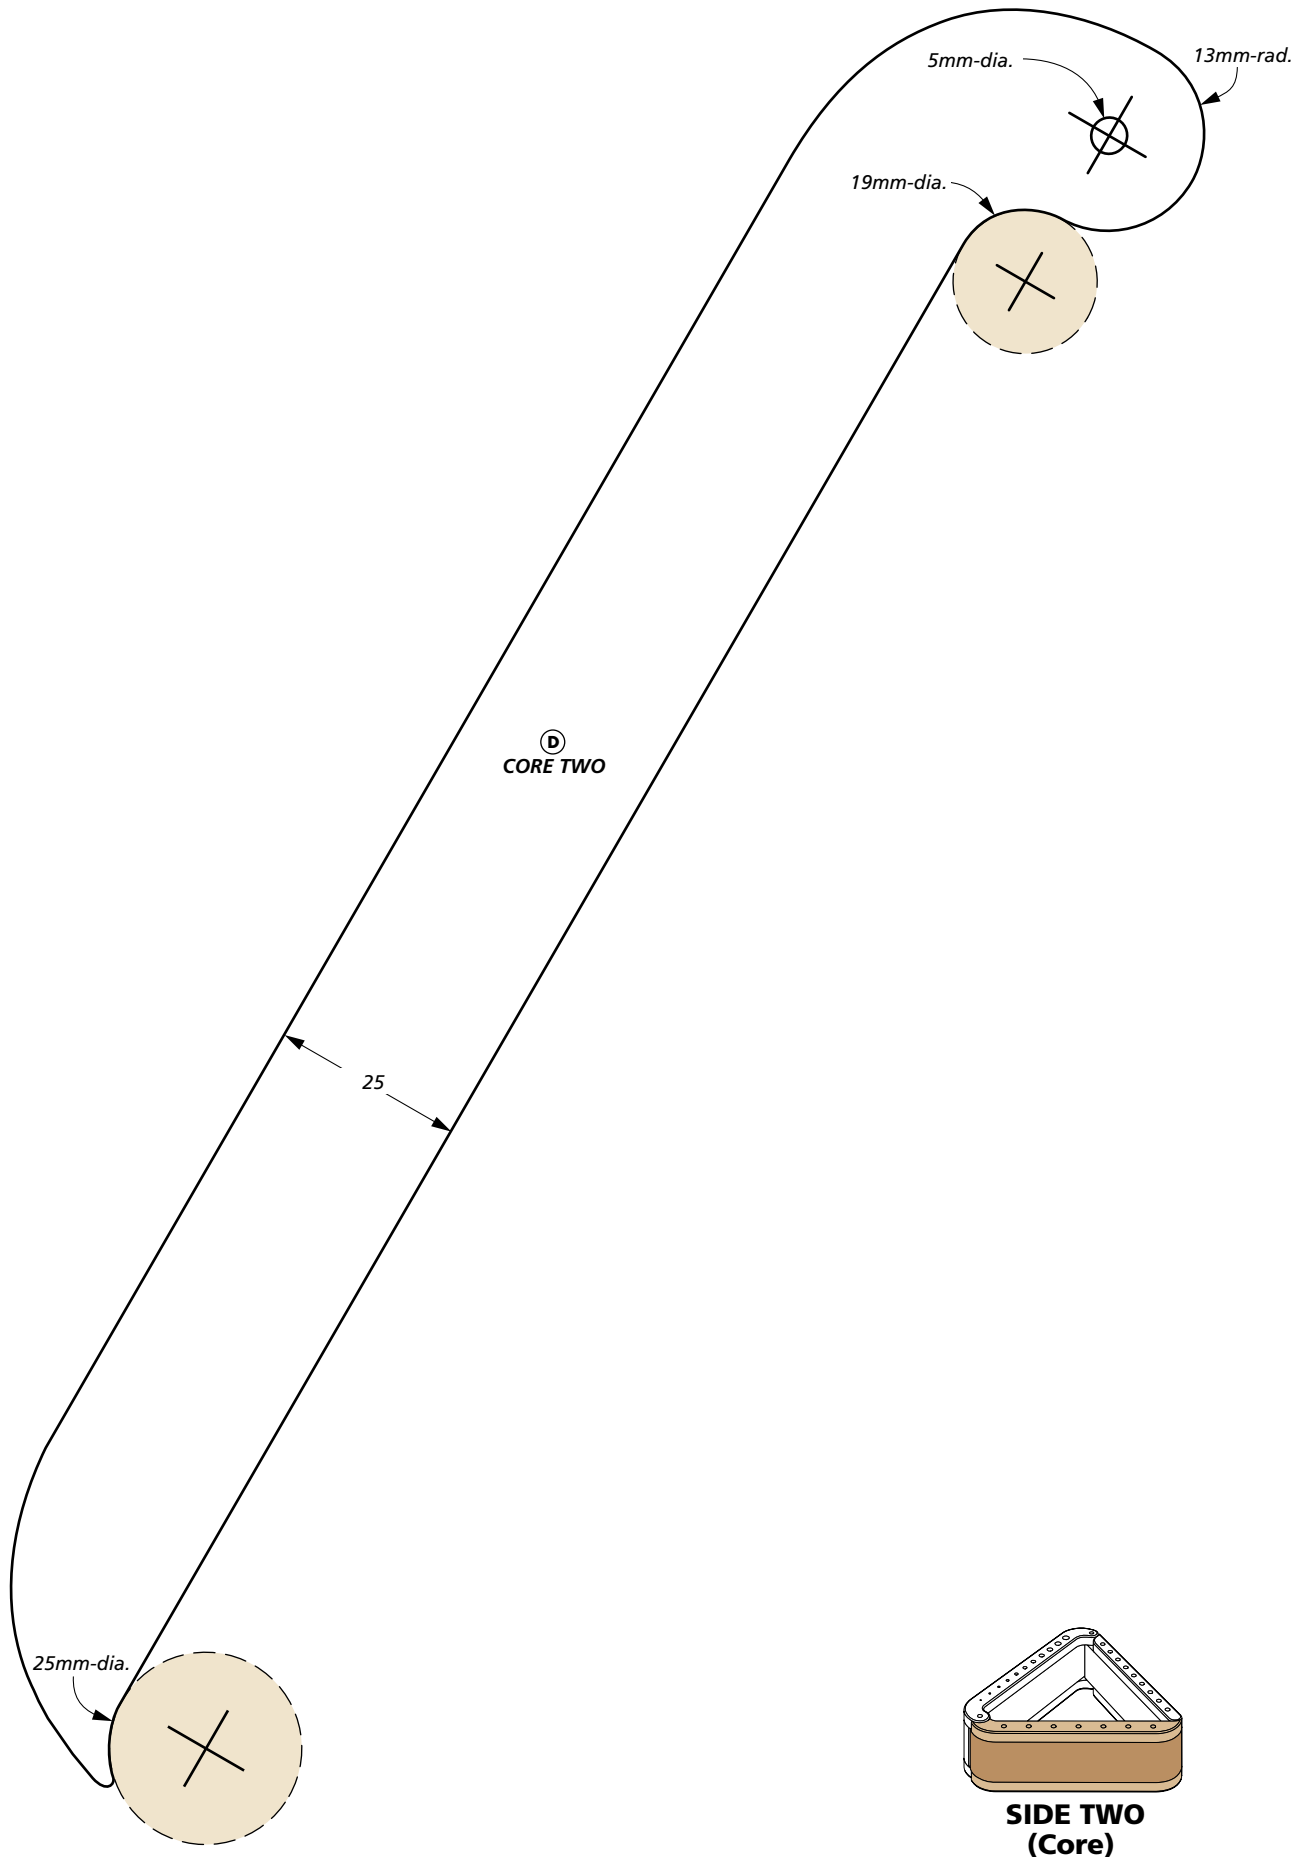

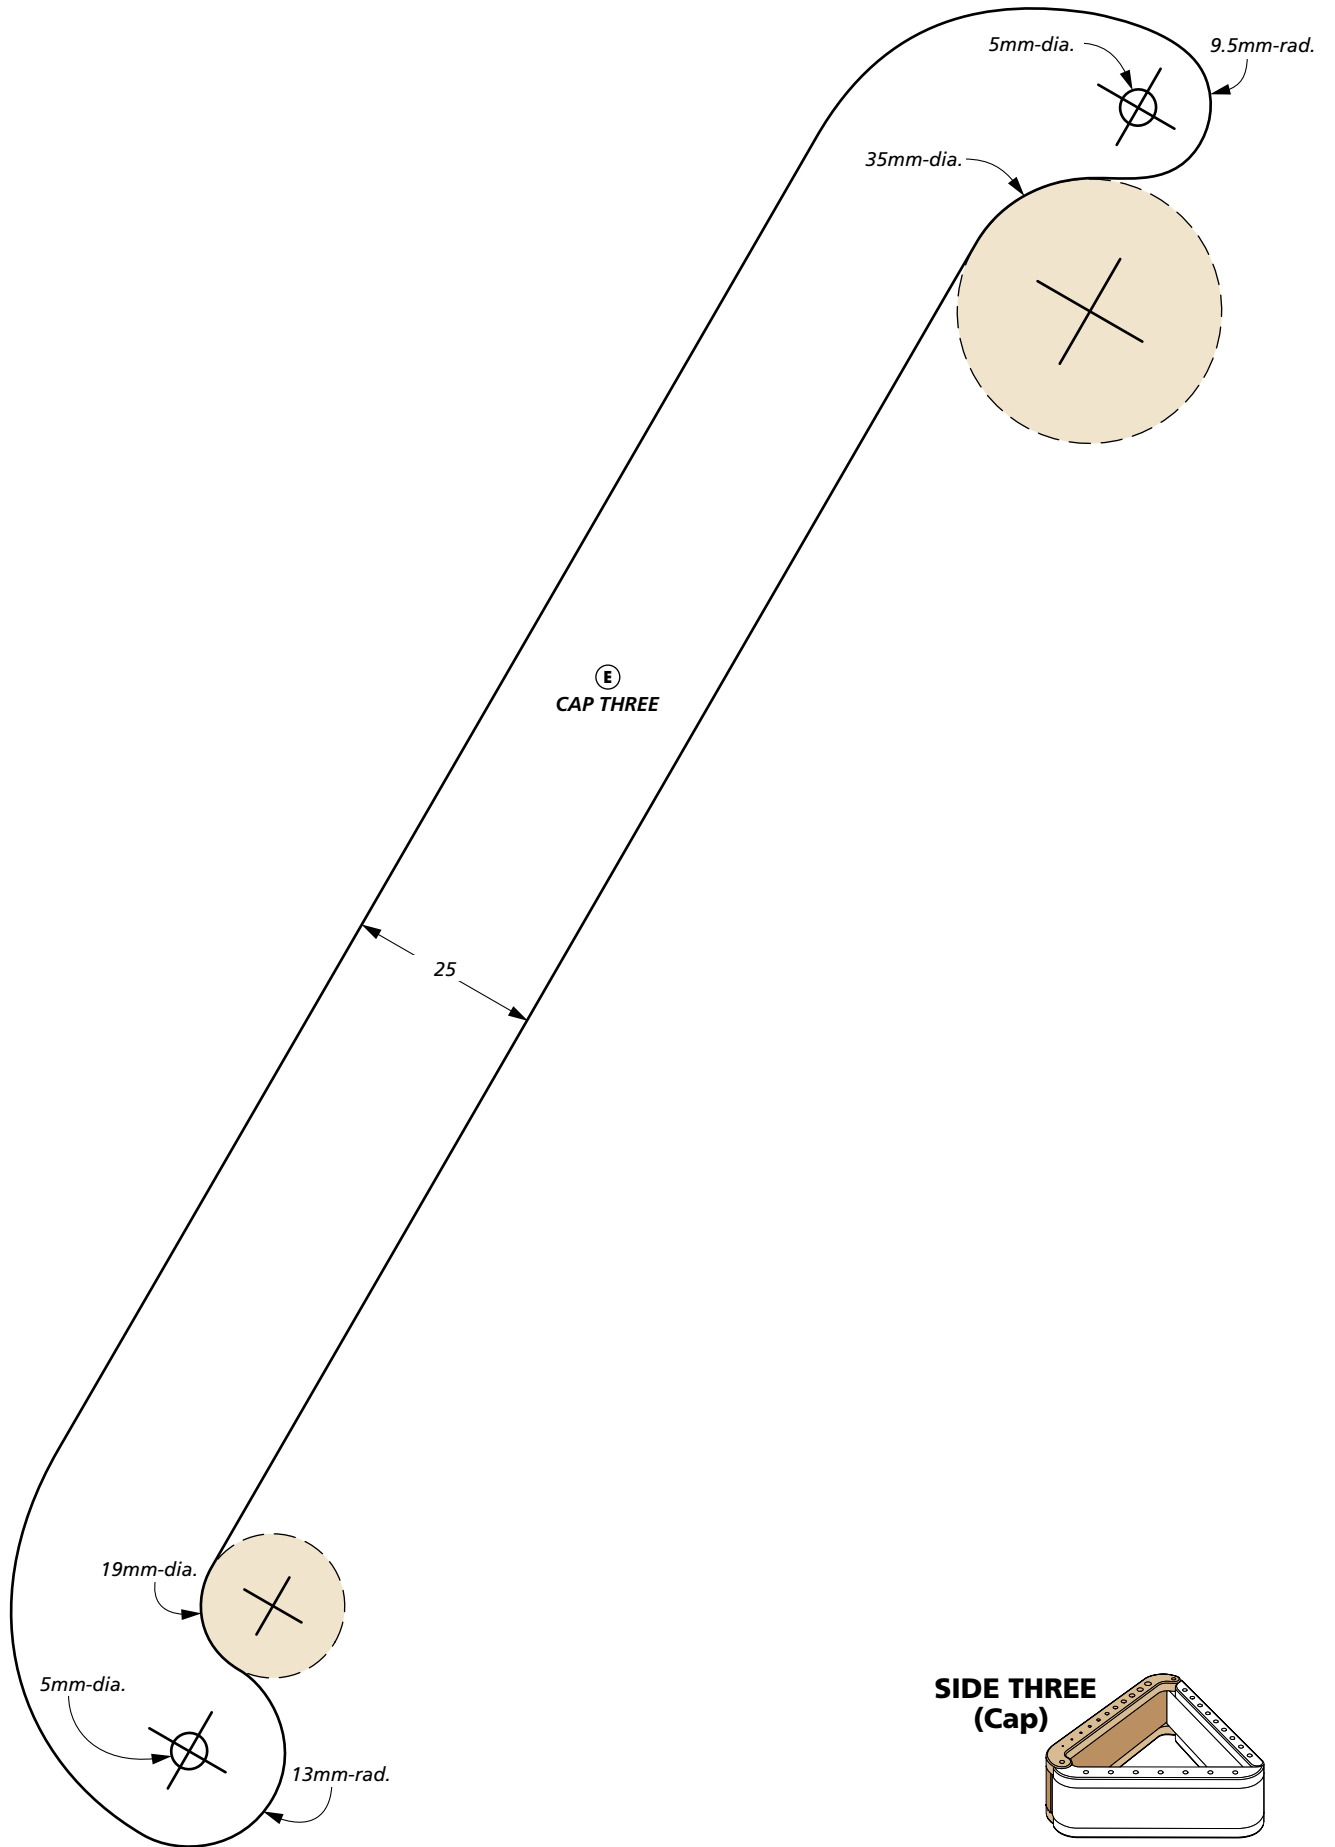

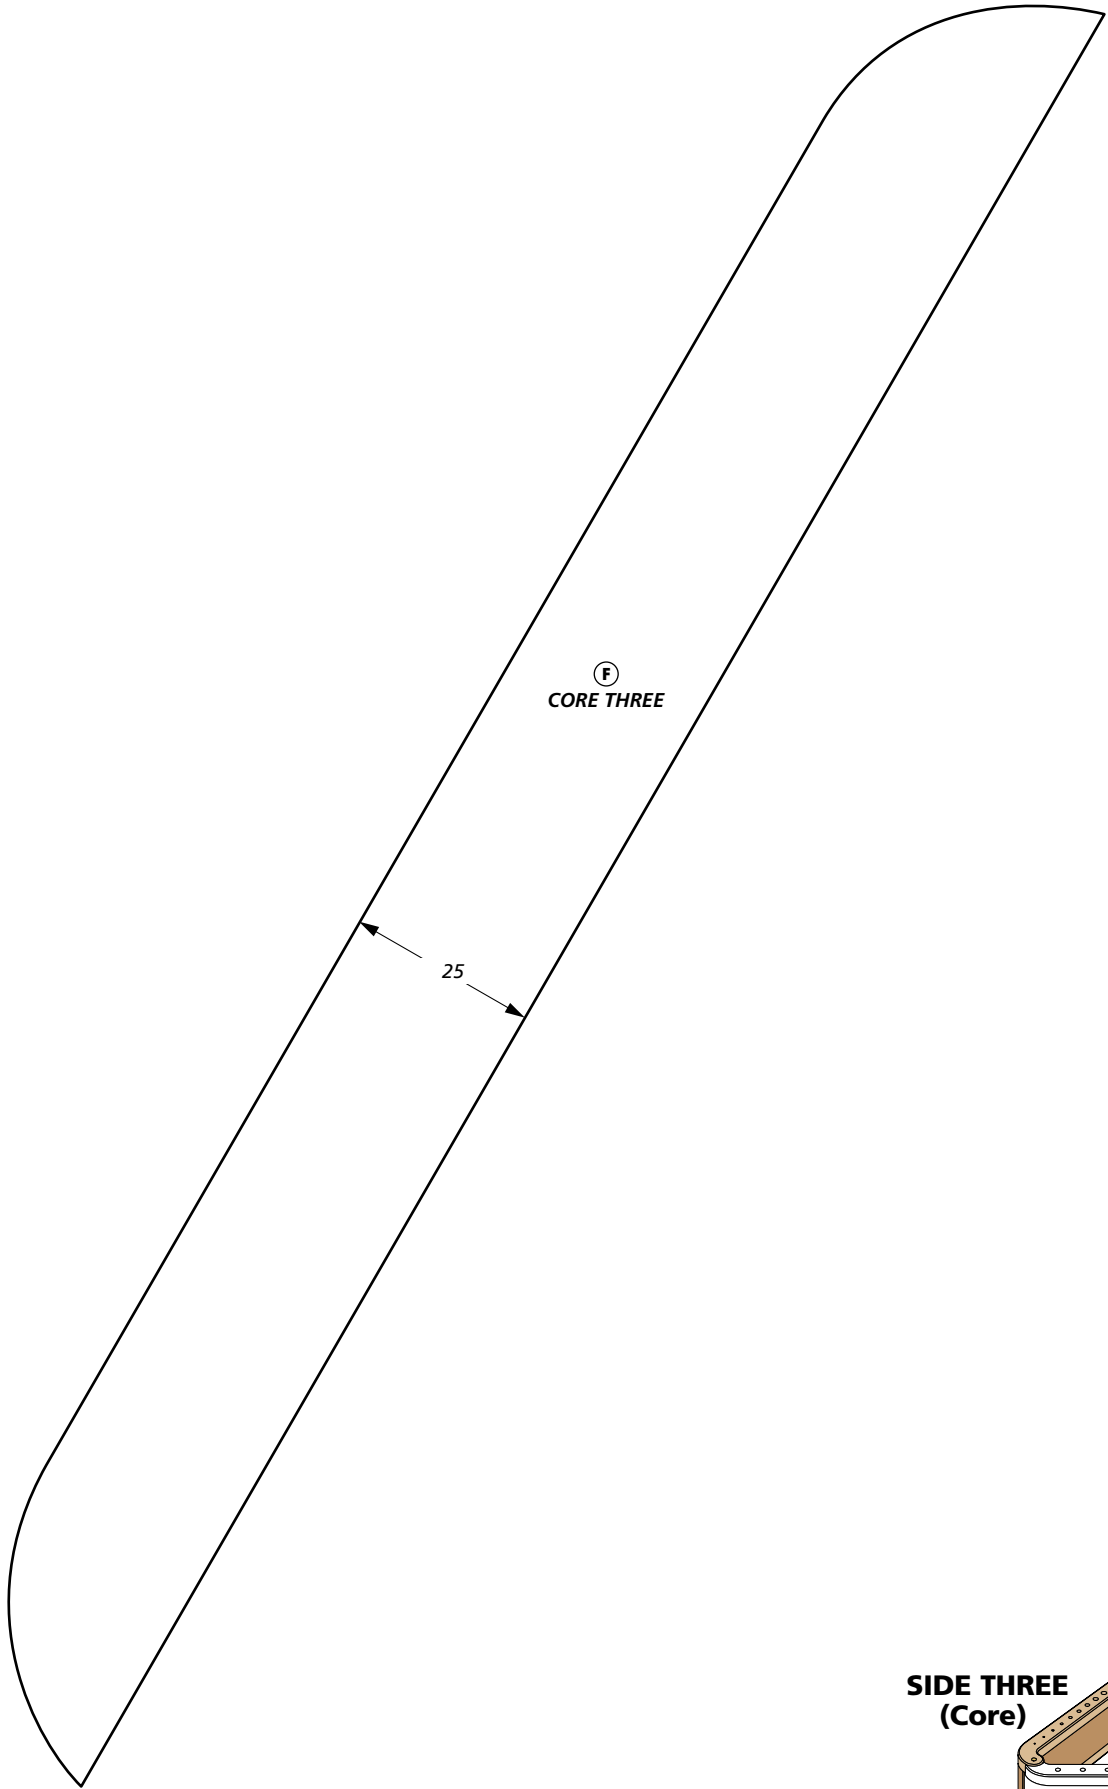

**SIDE THREE  
(Core)**

