


# tool tote Sawhorses


## Materials & Hardware

A	Ends (2)	425 x 230 x 18	Hardware
B	Bottom (1)	536 x 230 x 12	• (4) 6mm x 38mm Coach Bolts
C	Sides (2)	560 x 140 x 12	• (4) 6mm lock nuts
D	Feet (4)	220 x 65 x 18	• (4) 6mm washers
E	Stops (2)	130 x 18 x 18	• (2) 3/8" T-nuts
F	Tray Sides(2)	524 x 50 x 12	• (2) 3/8" washers
G	Tray Bottom(1)	524 x 115 x 6	• (2) 3/8" Studded knob
H	Tray Dividers(6)	115 x 38 x 6	• (4) #8 x 25mm c/s screws
I	Support Piece(1)	586 x 115 x 18	• (4) #6 x 25mm c/s screws
J	Uprights(2)	460 x 115 x 18	
K	Stiffeners(2)	586 x 50 x 12	


\*(Material and Hardware for one (1) Tote)

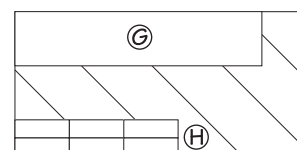

600 x 300 x 6 mm Masonite

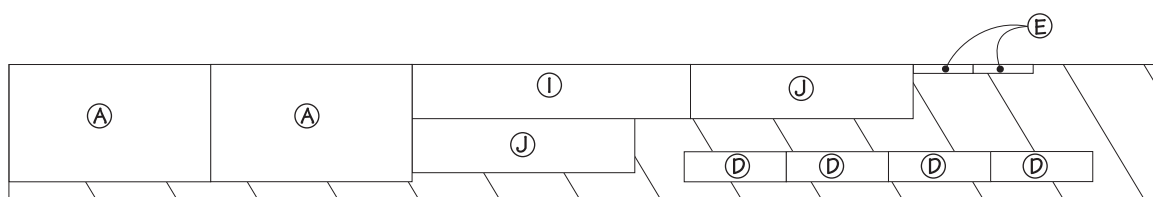

2400 x 240 x 18 Radiata or Kauri

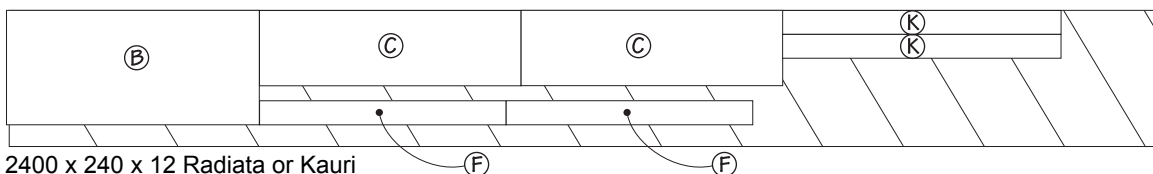

2400 x 240 x 12 Radiata or Kauri